




1 Place polarICE on desk.

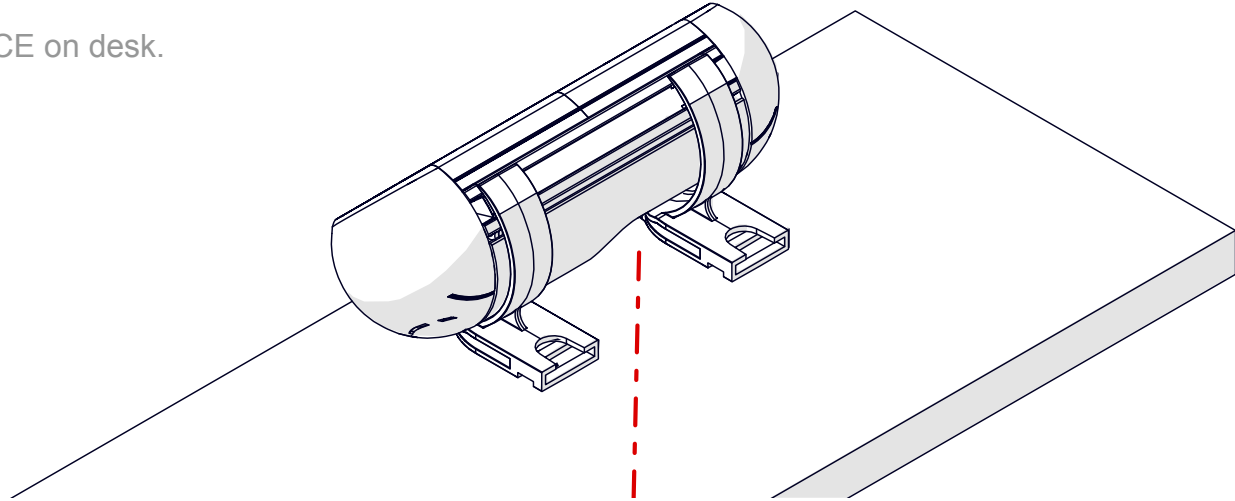

2 Insert mounting brackets.

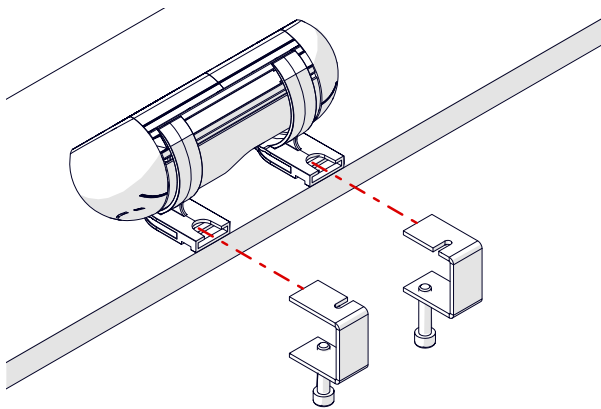

3 Tighten screws.

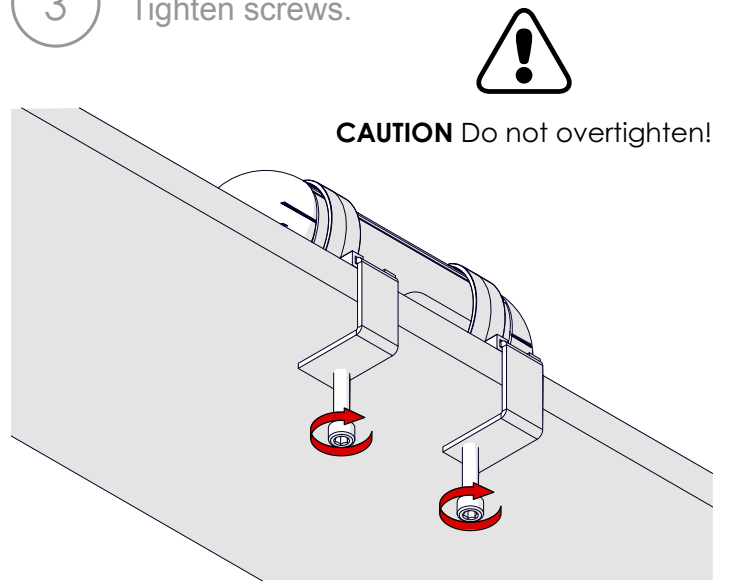

4

