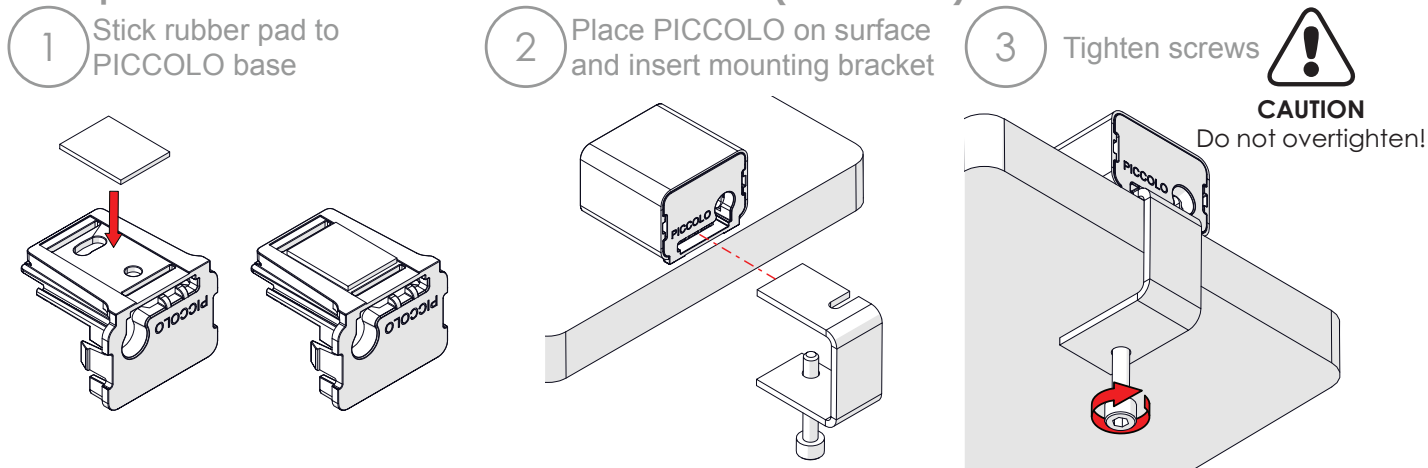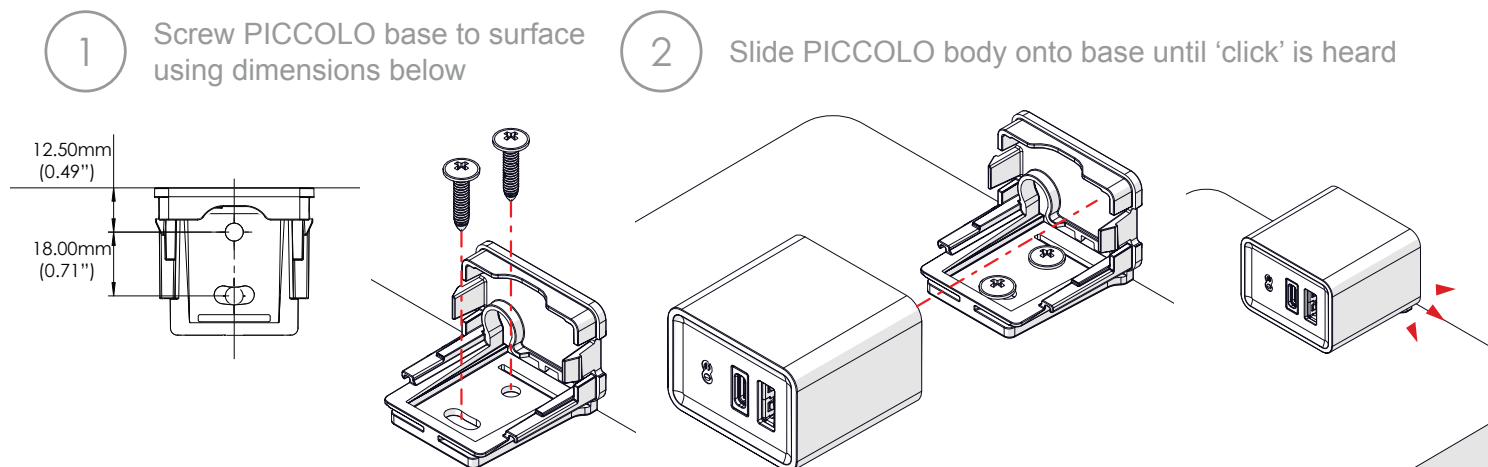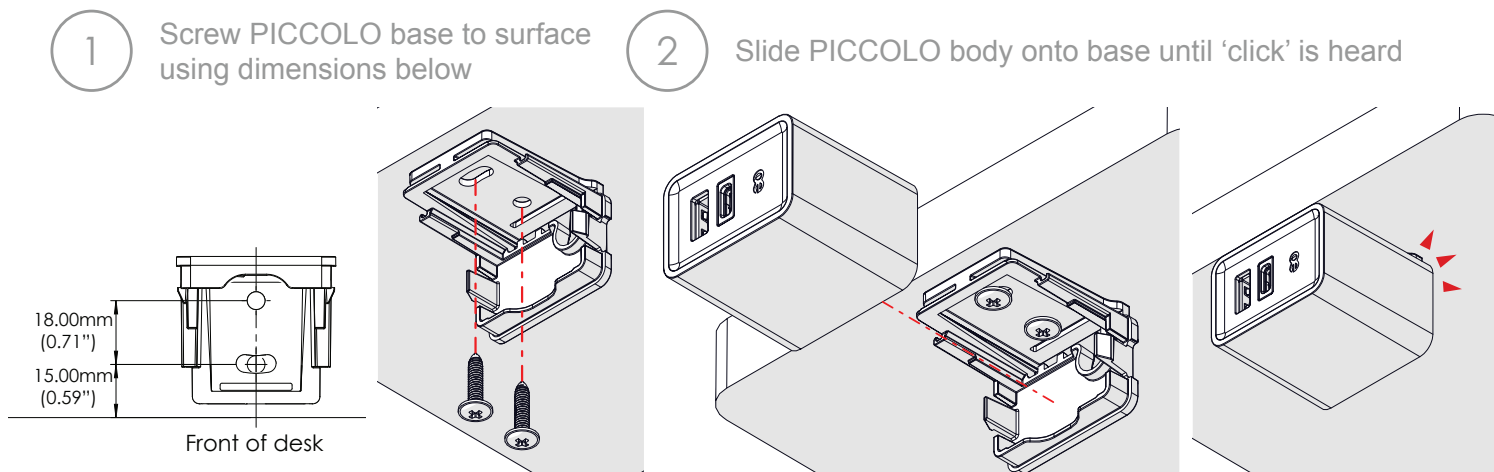## Clamp Bracket - suitable for desks 10 - 35mm (.39 - 1.37") thick
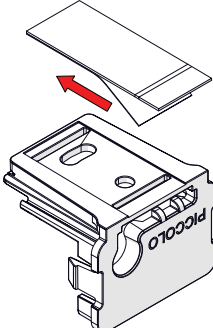
1 Stick rubber pad to PICCOLO base

2 Place PICCOLO on surface and insert mounting bracket
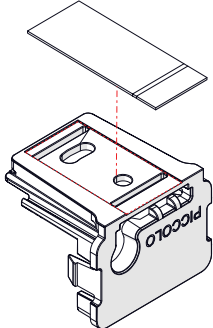
3 Tighten screws ⚠️
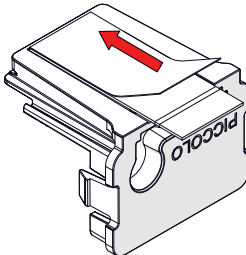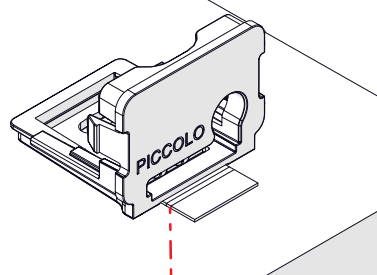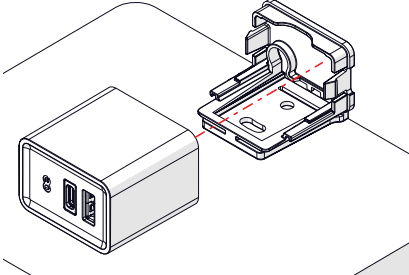
CAUTION
Do not overtighten!

Screw Down - On surface (Screw hole is 5mm (0.20"), suitable for < No. 10 screw)

1 Screw PICCOLO base to surface using dimensions below

2 Slide PICCOLO body onto base until 'click' is heard

12.50mm (0.49")

18.00mm (0.71")

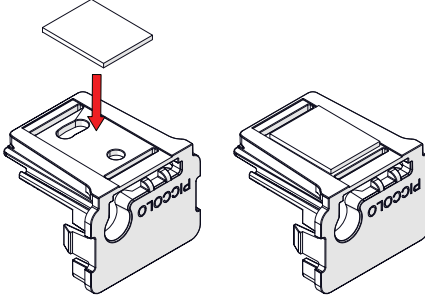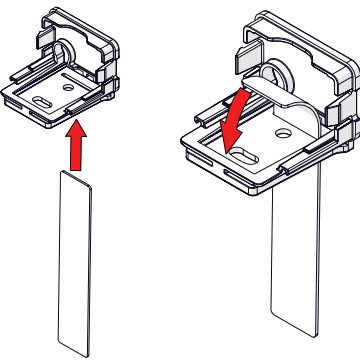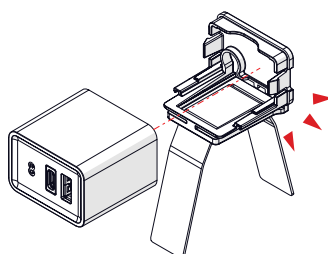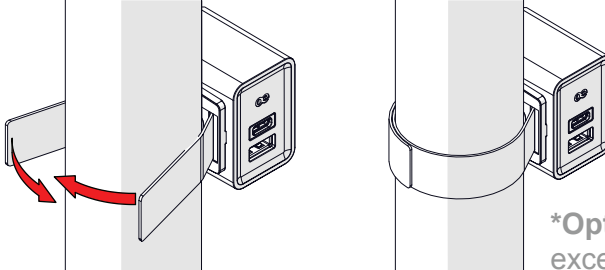## Screw Down - Under surface (Screw hole is 5mm (0.20"), suitable for < No. 10 screw)

1 Screw PICCOLO base to surface using dimensions below

2 Slide PICCOLO body onto base until 'click' is heard

18.00mm (0.71")

15.00mm (0.59")

Front of desk

Stick Down

1 Remove film from one side of fixing strip

2 Align with highlighted area on PICCOLO base and stick down

3 Remove film from other side of fixing strip

4 Place PICCOLO base on surface

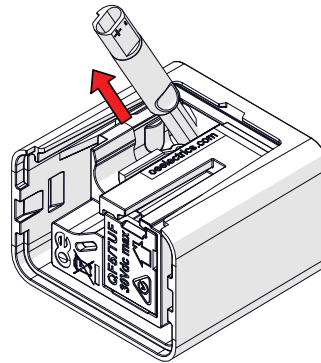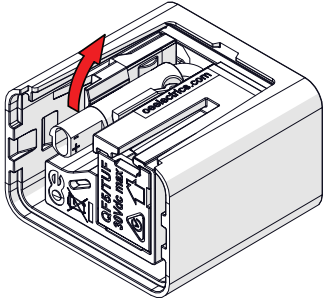**5** Slide PICCOLO body onto base until 'click' is heard

Velcro (suitable for any pole size ideally 40-60mm* (1.57"- 2.36"))

1 Stick rubber pad to PICCOLO base

2 Thread Velcro through 2 slots

3 Slide PICCOLO body onto base until 'click' is heard
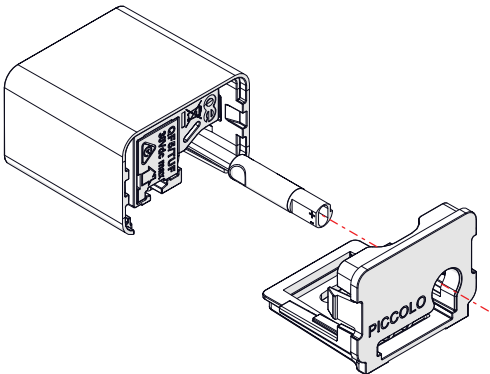
4 Wrap Velcro around pole

*Optional: For poles below 40mm, trim off excess velcro when fitted for a neater finish

Extracting GST08 Cable

1   Lift GST08 cable from Piccolo body

2   Slide GST08 cable through cable exit in Piccolo back

3   Place Piccolo in desired location